



How to Repair a Headphone Jack

The replacement of a Philips SHE6000/28 Headphone jack.

Written By: andrew



INTRODUCTION

Ever have that problem where you have to hold your phone just right to get sound through your headphones? Have you considered having a loose wire or a bad jack? This guide will help you to replace that bad jack so you can get your tunes back.



TOOLS:

- [Soldering Station](#) (1)
- [Wire Strippers](#) (1)
- [Desoldering Braid](#) (1)
- [Helping Hands stand](#) (1)



PARTS:


- [Solder](#) (1)
 - [Replacement Headphone Jack](#) (1)
 - [Electrical Tape, as needed](#) (1)
-

Step 1 — How to Repair a Headphone Jack




- Get all of the tools and parts together and ready for use.



Step 2

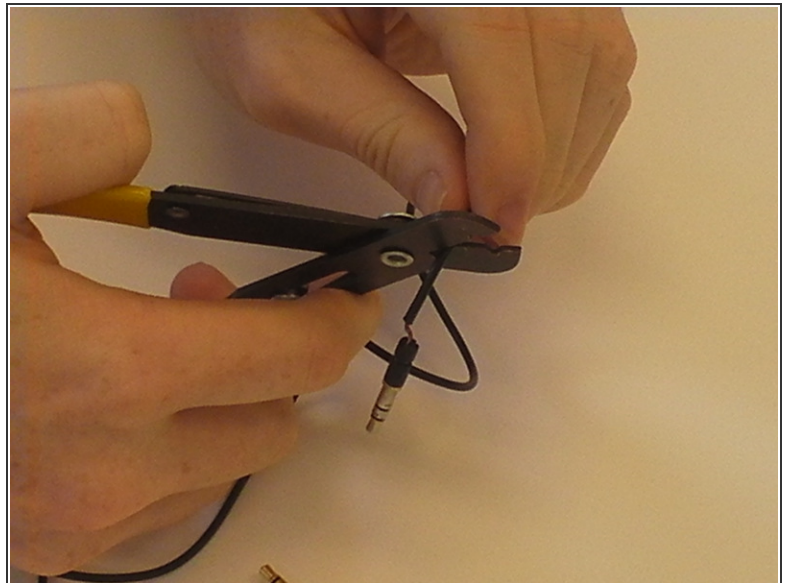

- Use wire strippers to cut off the broken headphone jack.


 Be careful when using the wire strippers. Make sure to keep them away from fingers and cut away from the body.

Step 3

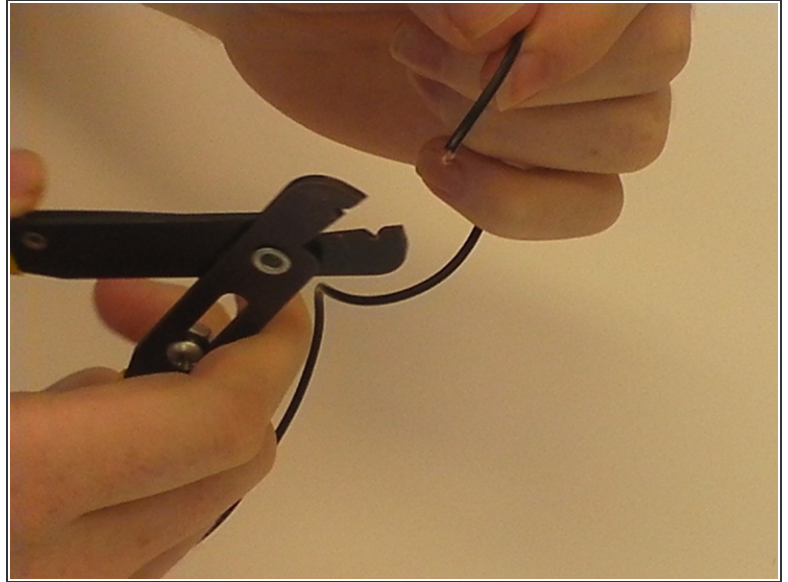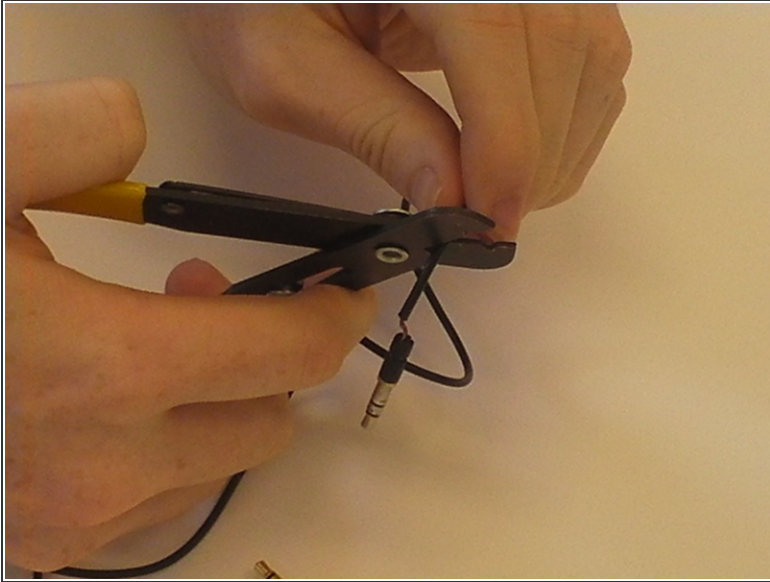


- Disassemble the new headphone jack.
- Measure the inside length of the new headphone jack.
- Add half an inch to the length you measured, and mark the new length on the old headphone wire.
- Clamp the wire strippers around the wire where the mark is. Press tight enough to cut through the insulation but not the wire. Pull (Strip) the insulation from the mark to the cut end.

Step 4

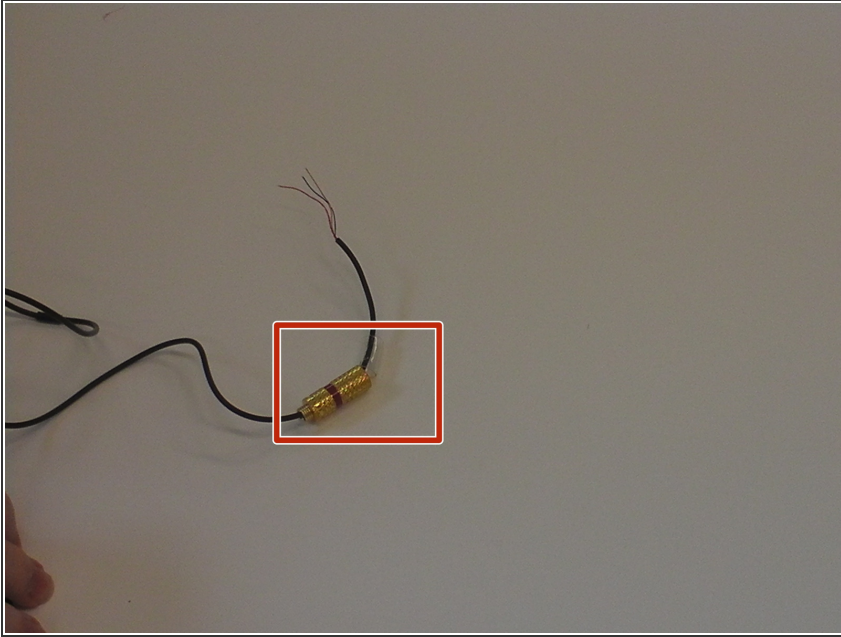


- Put the exposed cord through the metal and plastic sleeves of the jack, as shown.

Step 5

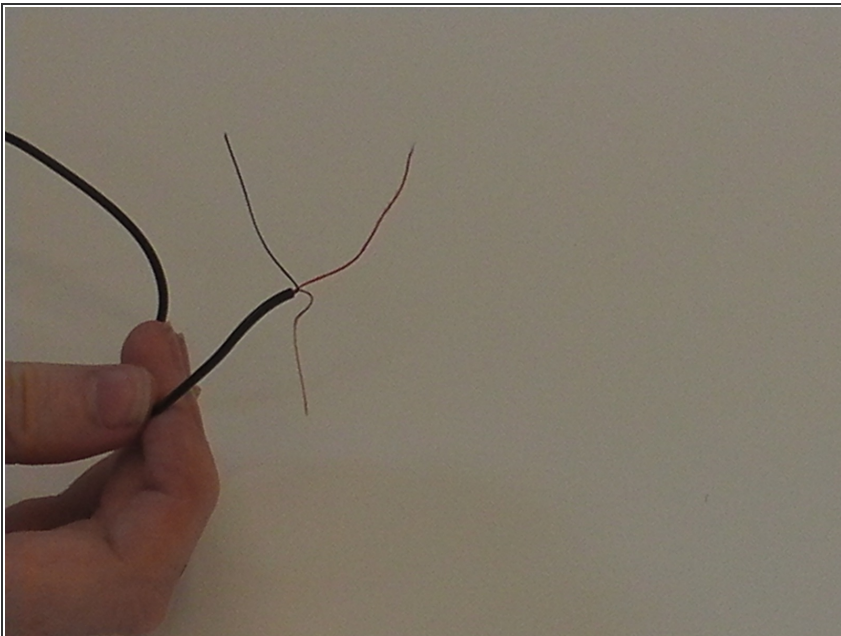


- Separate the wires by color. Make sure that they are not touching.

Step 6

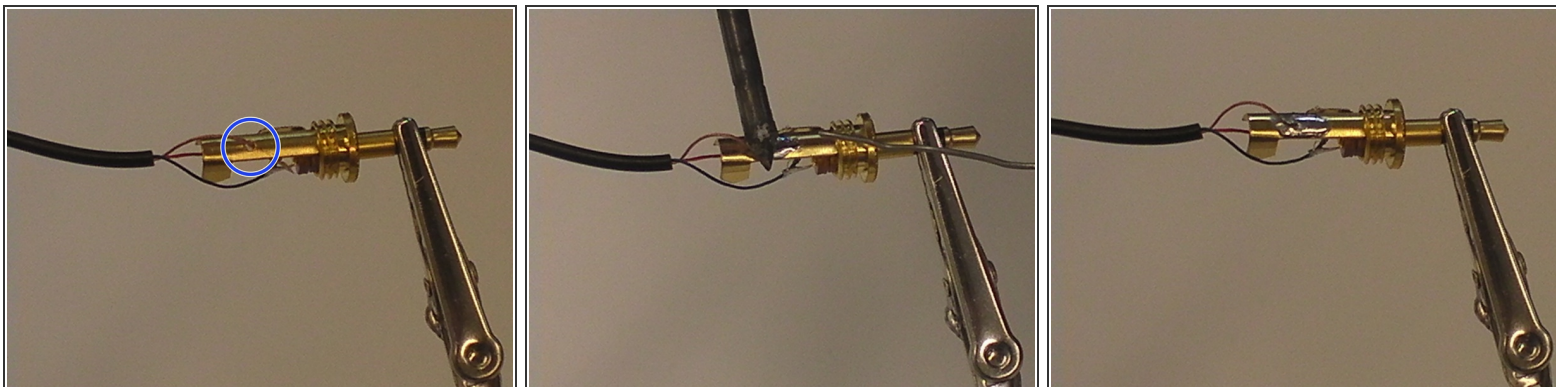


- Place the jack in the helping hands stand.
- Solder the ground wire to the bottom terminal.
 - Check out this awesome guide on [How To Solder and Desolder Connections](#).

Step 7

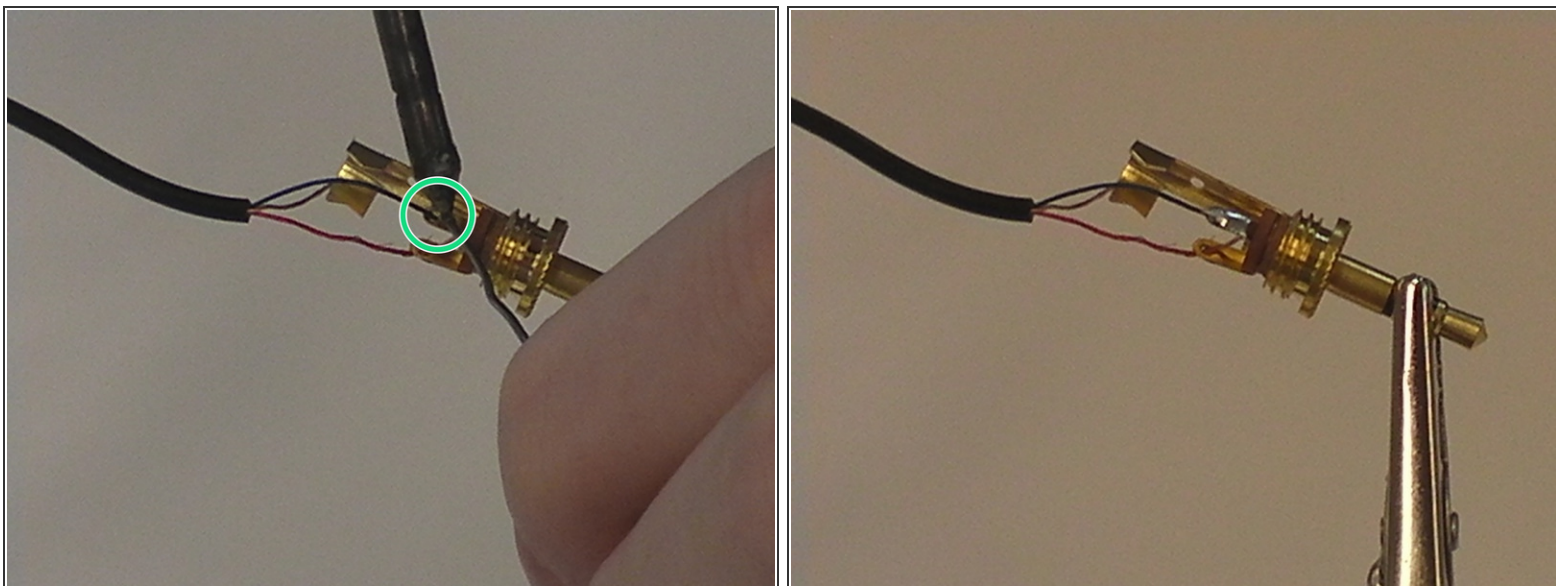

- Solder the green wire to the left terminal.


Step 8

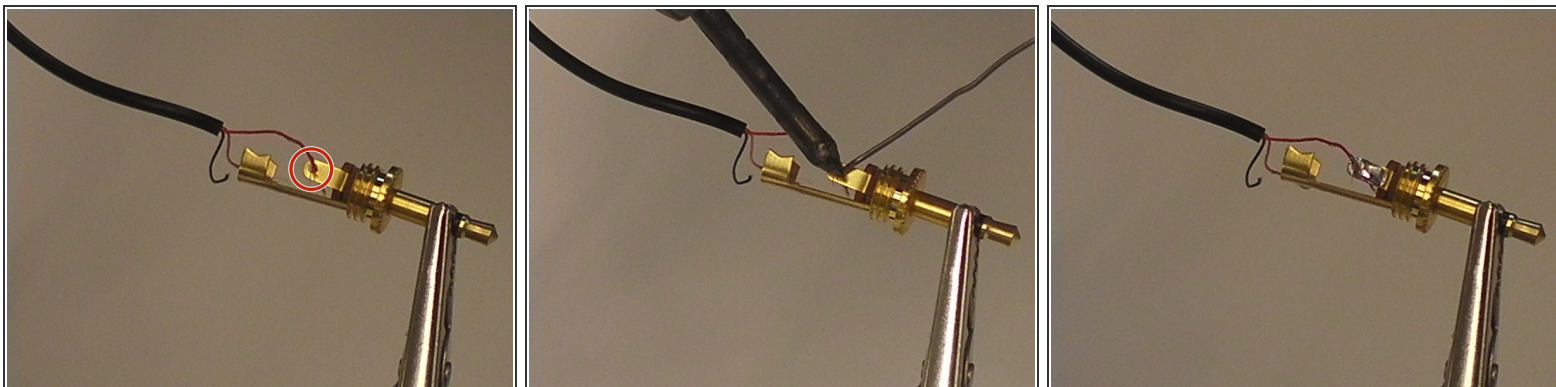

- Solder the red wire to the right terminal.


⚠ The soldering iron is hot. It may cause severe burns if it comes in contact with skin.

Step 9

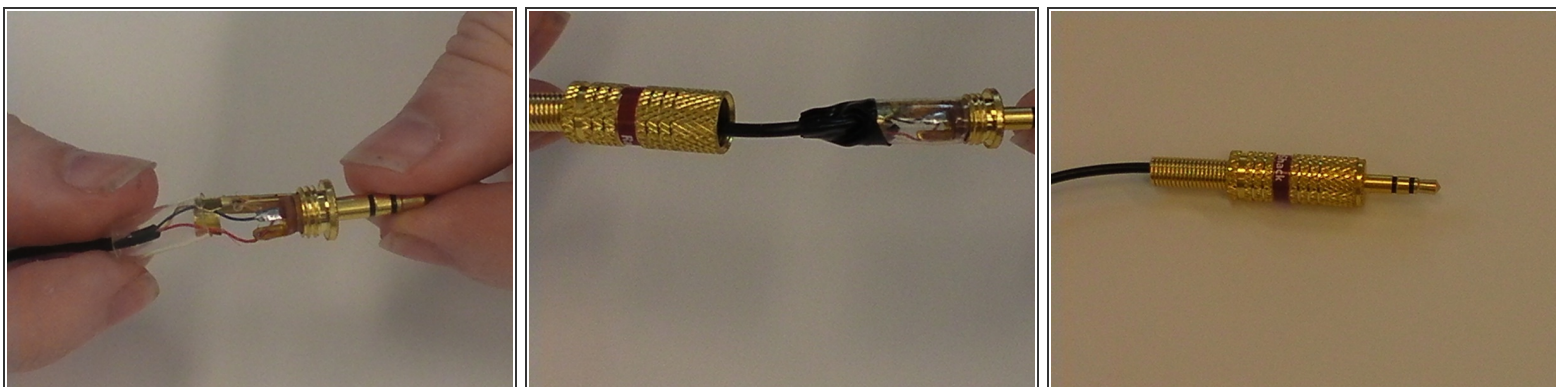

- Push the plastic sleeve back over the jack to cover the solder points.
- Apply electrical tape if desired.
- Push the metal sleeve over the plastic sleeve and connect to the jack.

Step 10

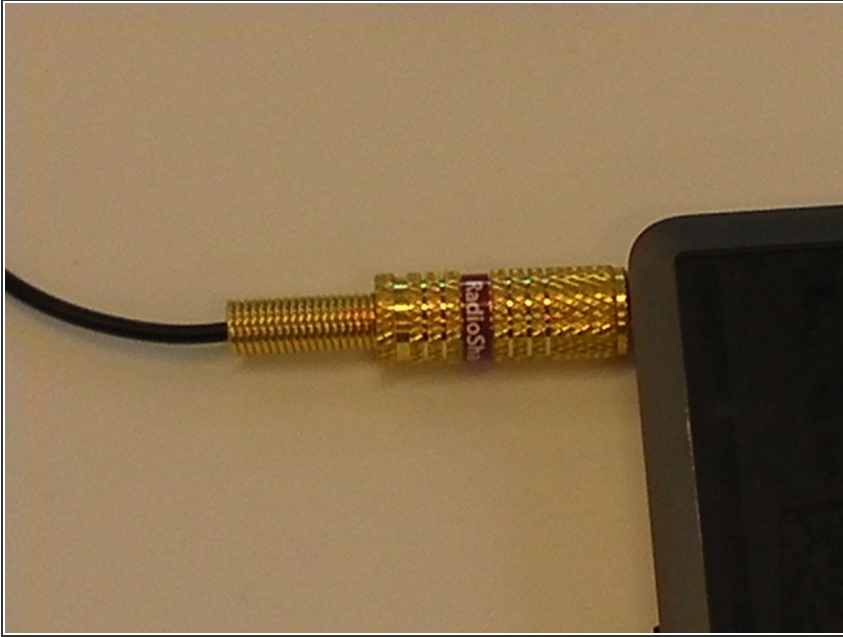

- Test the headphone by plugging it into a computer or music playing device.
- If there is adequate sound coming out of both headphones then you have successfully repaired the headphone jack. If not, take the sleeve off and check if the soldering points are still connected and nothing has broken off.

This document was last generated on 2017-10-25 09:36:16 PM.